
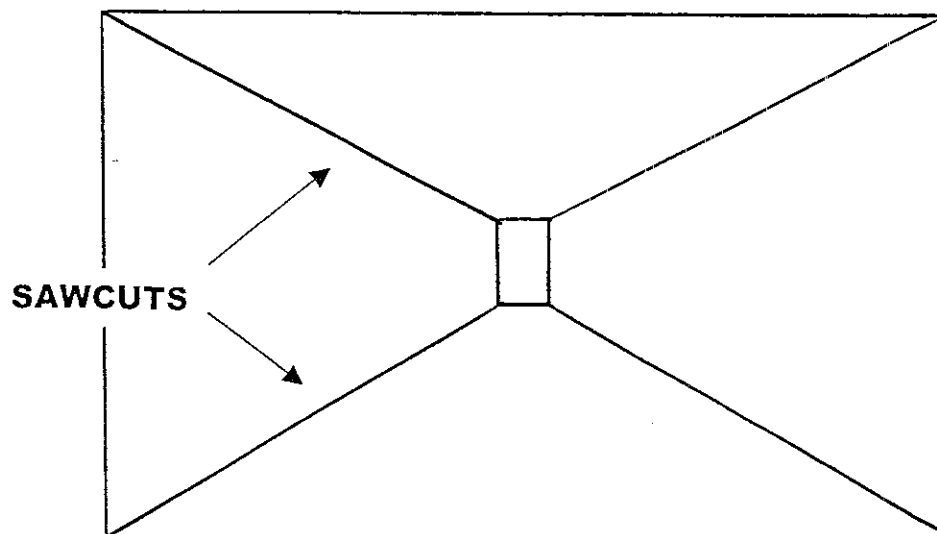


FIBERGLASS 2-COMPARTMENT RESIDENTIAL GRIT-INTERCEPTOR SUMP PIT

RECOMMENDED INSTALLATION INSTRUCTIONS

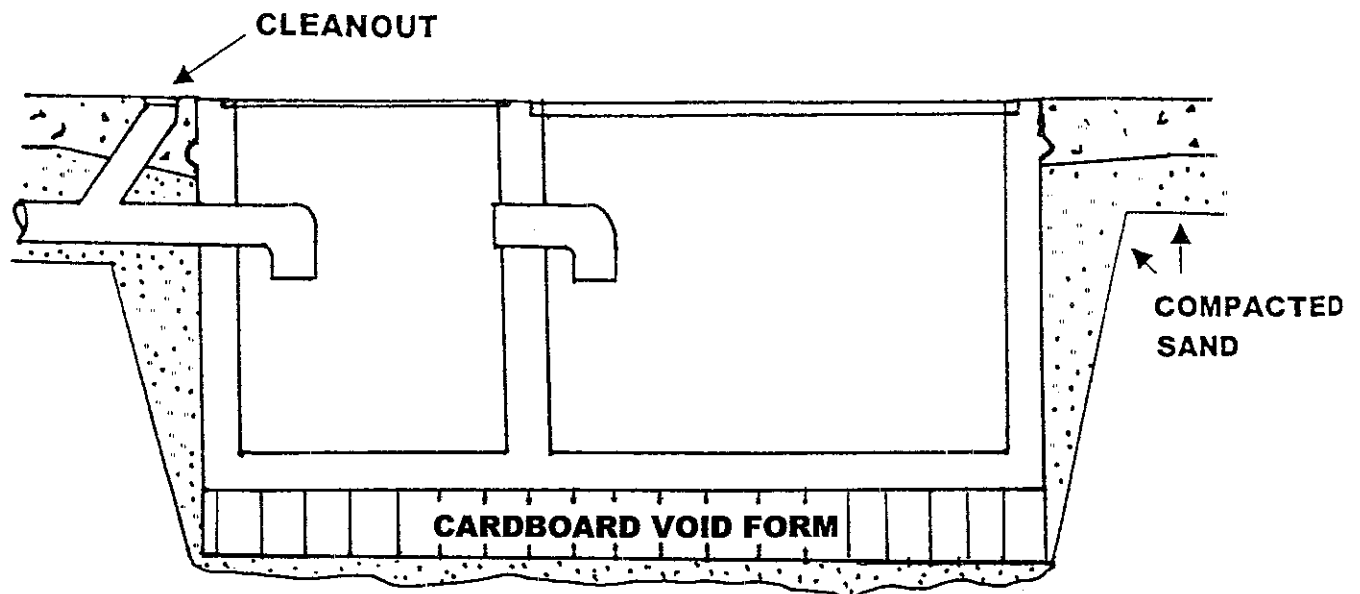

Garage Floorplan

TO REDUCE LIKELIHOOD OF RE-ENTRANT CRACKS AT SUMP CORNERS, INSTALL SAWCUT CONTROL JOINTS AS SHOWN ACCORDING TO SASK. READY MIXED CONCRETE ASSOCIATION RECOMMENDATIONS : 1) Early after initial set of concrete; 2) $\frac{1}{4}$ of slab thickness but no less than 25mm deep